USER MANUAL

RTX

Auracast™ Transceiver

Model B-RTX | Firmware 1.6.0 | October 2026

AURACAST



Dual mode
Receiver (RX) and transmitter (TX) in one device

Low latency
Auracast™ streaming under 40 ms

Easy connectivity
Tap-to-Access with B-PASS, SmartHive and NFC

Language flags
Find your language at a glance in the stream list

Interoperable
Works with the CASTER series and any Auracast™ transmitter

Audio guide ready
Media from microSD mixed with the microphone and broadcast as one Auracast™ stream

CONTENTS

What's inside

01	Overview	3
02	Controls & interfaces	4
03	Receiver (RX) mode	5
04	Language flags	6
05	Transmitter (TX) mode	7
06	Settings	8
07	Easy connectivity	9
08	Tap-to-Access with B-PASS	9
09	USB sound card	10
10	Licenses & operating modes	11
11	Advanced modes	12
12	Reset & firmware	14
13	Charging	15
14	Specifications	16
15	Troubleshooting	18
16	Safety & support	19
17	Related documentation & tools	21

About this manual: this edition covers RTX firmware 1.6.0. Screens and features may differ on devices running earlier firmware – see *Firmware upgrade* to update.

01

Overview

The Bettear RTX is a versatile Auracast™ transceiver. It switches between transmitter and receiver modes, which makes it suited to tour guiding, assistive listening and professional audio streaming.

RX Receiver mode



Listeners without Auracast™-enabled hearables pick a stream on the RTX and listen through headphones or a neck loop.

TX Transmitter mode



A guide or presenter speaks into the microphone; the RTX broadcasts it as an Auracast™ stream to every compatible device nearby.

Where it is used

Theaters · Tour guiding · Museums · Classrooms · Legal venues · Places of worship

The RTX is fully interoperable with Auracast™ systems and with the Bettear CASTER series, and is managed together with B-PASS, SmartHive, Hive 4 and the Hive Central software. Product manuals and the Hive Central User Guide are on bettear.com – see chapter 17, *Related documentation & tools*.

02

Controls & interfaces

All controls are on the front and sides of the device; the charging contacts and USB-C port are at the bottom.

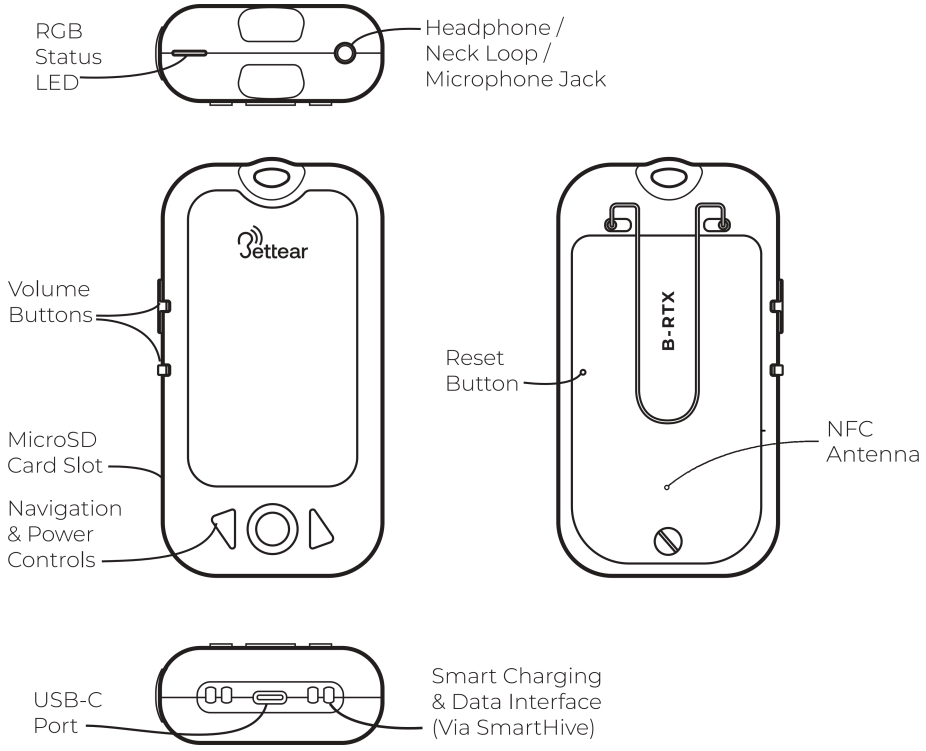

Buttons

- **Red circle button** – power on/off (press and hold 3 seconds) and select.
- **Red arrow buttons** – quick press to scroll up and down; in TX mode, press and hold (3 seconds) the left or right arrow to move between pages.
- **Volume buttons** – on the left side.
- **Reset button** – on the back, pressed with a pin.

The RX/TX slide switch under the battery cover on earlier units is no longer used – modes are switched in Hive Central or with the RTX quick setup tool on bettear.com – see chapter 10.

Audio interface



Tip	Left
Ring 1	Right
Ring 2	Ground
Sleeve	Microphone

3.5 mm TRRS jack (CTIA wiring) for headphones, headsets, neck loops and microphones. TRS headphones are also supported. Make sure the connected audio device is compatible with this plug configuration.

03

Receiver (RX) mode

In receiver mode the RTX scans for available Auracast™ streams and lets the listener join the one they want.

Power on / off

Press and hold the red circle button for **3 seconds**.

The receiver screen

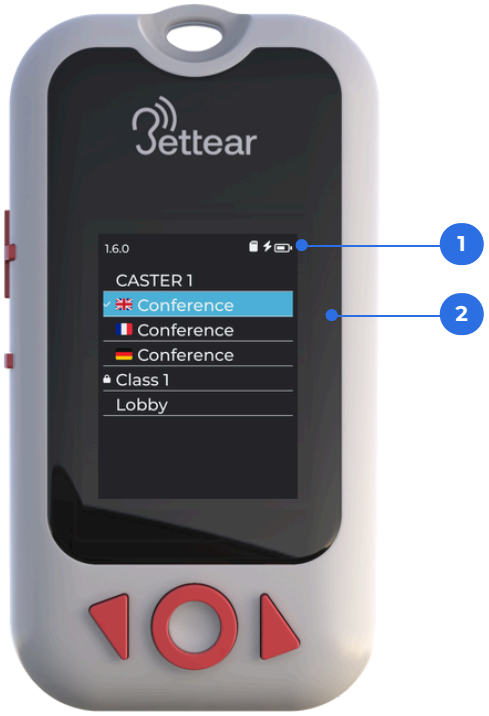

1. **Status bar** – firmware version, SD card, charging and battery level. The connection indicator shows while the RTX connects to a stream and also indicates the radio reception quality (RSSI).
2. **Stream list** – available Auracast™ streams, with a language flag where the broadcast provides one.

Playing · Secure (encrypted) · Connection failed

Quick start – listening

1. Connect headphones or a neck loop.
2. Power on the RTX.
3. Scroll through the streams with the arrow buttons.
4. Press the red circle button to join.
5. Adjust the volume.

Scanning: the RTX scans for broadcasts only while no stream is playing. To search for new broadcasts, select the playing stream again to stop playback – the RTX then resumes scanning.

Secure streams: encrypted streams cannot be joined from the list. To access them, use B-PASS, SmartHive, or the RTX quick setup tool (Stream Lock with the broadcast name and passkey) (online at bettear.com/rtx-setup; the *RTX Quick Setup Guide* can be downloaded from the RTX page on bettear.com: bettear.com/products/rtx).

04

Language flags

When a broadcast includes language information, the RTX shows the matching country flag next to the stream name – so listeners find their language at a glance, for example on multi-language broadcasts from a CASTER or a FORGE XD.

The flag is taken from the standard Language metadata of the Auracast™ broadcast (Bluetooth LE Audio metadata type 0x04, carried in the broadcast's BASE). This value is a three-letter ISO 639-3 language code, for example *eng*, *fra* or *jpn*, so flags also appear for broadcasts from other Auracast™ transmitters that set it.

- The language of each stream is set on the transmitting **CASTER**. Refer to the CASTER user manual, available on the CASTER page of bettear.com (bettear.com/products/caster).
- When a stream has a program name (Program Info), the RTX shows it instead of the broadcast name, so each language can carry its own label.
- Streams without language information, or in a language outside the list below, are shown by name only.



Multi-language broadcast
each language is listed as its own stream



Same name, different languages
streams are told apart by their flags

Languages shown with a flag: Arabic, Bengali, Bulgarian, Chinese (Mandarin), Chinese (Cantonese), Czech, Danish, Dutch, English, Finnish, French, German, Greek, Hebrew, Hindi, Hungarian, Indonesian, Italian, Japanese, Korean, Norwegian, Persian, Polish, Portuguese, Romanian, Russian, Slovak, Spanish, Swedish, Tagalog (Filipino), Thai, Turkish, Ukrainian, Urdu and Vietnamese.

Each language is represented by one flag – for example, English is shown with the UK flag and Spanish with the flag of Spain. Language flags require RTX firmware 1.5.0 or later.

05

Transmitter (TX) mode

In transmitter mode the RTX captures audio from the connected microphone and broadcasts it as an Auracast™ stream. The Broadcast screen is shown after the device starts in TX mode.

> **License required:** TX mode is available only on an RTX with a **DUPLEX** or **DUPLEX+** license. See chapter 10, *Licenses & operating modes*, for license options and how to switch between RX and TX.



1. **Status bar** – SD card, charging and battery level.
2. **Broadcast name** – the name Auracast™ receivers use to find the stream.
3. **QR code** – scan to connect with compatible devices.
4. **Navigation menu** – press and hold (3 seconds) the left or right arrow button to move to the previous or next page. A quick press scrolls up and down within the selected page:

   - **Broadcast info**
     the broadcast information and a QR code for quick access
   - **Audio player**
     audio files on the microSD card – shown only with an SD card created in Hive Central
   - **Settings**
     broadcast and device settings – see *Settings*

Quick start – broadcasting

1	2	3	4
Connect a microphone or headset.	Power on the RTX.	Change the broadcast name if needed (default B-RTX1).	Speak – nearby Auracast™ receivers can join.

Custom broadcast names are set with the RTX quick setup tool (online at bettear.com/rtx-setup; the *RTX Quick Setup Guide* can be downloaded from the RTX page on bettear.com: bettear.com/products/rtx), or with SmartHive and the Hive Central software – see the Hive Central User Guide: bettear.com/hive-central-guide

06

Settings

The Settings screen is available in TX mode.



1. Open the Settings page: press and hold the left or right red arrow button to move between the pages (the three icons at the bottom of the screen) until the settings icon is selected.
2. Quick-press the arrow buttons to scroll to a setting, then quick-press the red circle button to select it.
3. Change the value with a quick press of the arrow buttons.
4. Quick-press the red circle button again to save.

SETTING	VALUES	DESCRIPTION
Name	B-RTX1 … B-RTX50	One of the predefined broadcast names advertised to Auracast™ receivers. **Note:** custom names are set with the RTX quick setup tool (online at bettear.com/rtx-setup; the *RTX Quick Setup Guide* can be downloaded from the RTX page on bettear.com: bettear.com/products/rtx) or with SmartHive and Hive Central.
TX Power	5, 10, 15, 20 dBm	RF transmission power. ⚠ **Important:** it is the user's responsibility to comply with local regulations. Bettear assumes no liability for regulatory non-compliance.
Voiceover	ON / OFF	Automatic audio ducking based on microphone activity. When OFF, microphone and audio playback are mixed without distortion.
Monitor	ON / OFF	Microphone loopback – when ON, the speaker or guide hears their own voice in the headset connected to the RTX, like a stage monitor.
Version	1.6.0	The installed firmware version.

07

Easy connectivity

The RTX offers several ways to reach the right stream with little or no user interaction.

Stream Lock

Locks the RTX to one predefined stream. **Zero user actions** – once in range of that stream, the RTX connects and plays the audio automatically.

List Lock

Filters out unwelcome streams – only the open and secure streams the user is authorized to access are displayed.

Tap-to-Access

Tap the RTX on a B-PASS panel to join that CASTER's stream, including secure streams.

Stream Lock and List Lock are configured with SmartHive and Hive Central, or for a single RTX with the RTX quick setup tool (online at bettear.com/rtx-setup). Tap-to-Access needs a B-PASS panel – see chapter 08. Hive Central and its online user guide are on the Hive Central page of bettear.com: bettear.com/hive-central-guide

08

Tap-to-Access with B-PASS

Where a B-PASS access panel is installed next to a CASTER, listeners join the right stream – open or secure – with a single tap. No stream list to scroll and no passkey to type.

1. Make sure the RTX supports NFC (some RTX models do not), and that it is on and in **receiver (RX)** mode.
2. On the B-PASS, select the stream (language) you want, if the panel offers more than one.
3. Hold the **back of the RTX** – the NFC antenna area on the lower half (see chapter 02) – against the **NFC icon** on the B-PASS frame.
4. The RTX joins the stream and starts playing; the check icon appears next to the stream name.



Note: secure streams are joined the same way – the passkey is passed automatically. Works with all RTX licenses. B-PASS set-up: bettear.com/products/b-pass

09

USB sound card

In receiver (RX) mode, an RTX connected to a computer by USB also works as a USB audio input. The Auracast™ stream the RTX is playing is delivered to the computer as a microphone signal, so any application that accepts a microphone – speech-to-text, live captioning, translation, recording or conferencing software – receives the transmitter's audio directly.

No driver installation

The RTX is a standard USB Audio Class device. Windows, macOS and Linux recognize it automatically as an audio input named **Bettear USB Mic**.

Audio format

48 kHz stereo PCM over USB, with the low latency of the Auracast™ link (under 40 ms). The RTX is powered and charged from the computer's USB port while connected.



RTX connected to a laptop by USB

Using the RTX as a sound card

1. Set the RTX to **receiver (RX)** mode and join the required stream.
2. Connect the RTX to the computer with a USB-C data cable.
3. In the computer's sound settings, or in the application, select **Bettear USB Mic** as the input device.
4. Start the application – it now receives the stream the RTX is playing.

Example – speech-to-text in a classroom A student runs a speech-to-text or translation application on a laptop with an RTX connected as its input. The lecturer's microphone feeds the CASTER, so the application receives the signal captured at the source: free of room reverberation, distance losses and audience noise. Recognition accuracy therefore does not depend on where the student sits – the last row gets the same input quality as the front row – and the engine works with a clean, consistent signal throughout the lecture.

Note: use a USB data cable – charge-only cables do not carry audio. The USB connection is also used by the RTX quick setup tool and the RTX Upgrade Tool; close those tools before using the RTX as a sound card.

10

Licenses & operating modes

RTX features are enabled by software licenses. DUPLEX and DUPLEX+ can be applied to a unit at any time.

	EXPERIENCE	DUPLEX	DUPLEX+
Receiver mode	✓	✓	✓
Transmitter mode	–	✓	✓
Tap-to-Access (NFC)	✓	✓	✓
Audio file broadcasting & playback	–	–	✓
Timecode	–	–	✓

License installation

Purchase licenses from Bettear or your local Bettear distributor – you receive a license file by email. Load it in one of three ways:

A **RTX Upgrade Tool**
See steps below

B **RTX quick setup tool**
Online at bettear.com/rtx-setup; the *RTX Quick Setup Guide* can be downloaded from the RTX page on bettear.com (bettear.com/products/rtx)

C **SmartHive + Hive Central**
See the Hive Central User Guide: bettear.com/hive-central-guide

With the RTX Upgrade Tool

1. Launch the RTX Upgrade Tool first, then connect the RTX with a USB cable.
2. Check the current license information in the **Detected Device** area.
3. Click **Load License** and select the license file. The number of available licenses is shown.
4. Click **Apply License** and wait for the process to complete.

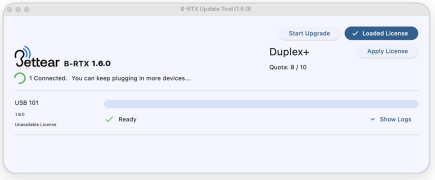

> **Note:** licenses can be applied to RTX devices running firmware 1.0.9 or later – update older devices first.

Switching between RX and TX

Switching is available on RTX devices licensed with DUPLEX or DUPLEX+. There are two ways to do it:

A **Hive Central software**

Place the RTX in a **SmartHive** cradle connected to Hive Central and change its mode there – ideal for setting up many devices at once.

Hive Central User Guide:
bettear.com/hive-central-guide

B **RTX quick setup tool**

Connect a single RTX to a computer with its USB cable and switch it in the browser – no software to install.

Online at bettear.com/rtx-setup. The *RTX Quick Setup Guide* can be downloaded from the RTX page on bettear.com:
bettear.com/products/rtx

> **Important – the RX/TX slide switch is no longer used.**
>
> Do not open the battery cover to change modes, as on earlier versions – use Hive Central or the RTX quick setup tool.

11

Advanced modes

Pre-loaded audio broadcast TX MODE DUPLEX+

Tour packages with pre-recorded audio in several languages are created in **Hive Central** and written to a microSD card (not included). Once the RTX in **transmitter (TX) mode** is programmed for a tour, the guide plays the pre-recorded audio from the RTX: it is mixed with the live microphone and broadcast together as a single Auracast™ stream. With Voiceover on, ducking lowers the media while the guide speaks.

Broadcasting tour audio: once a tour is programmed, a playlist icon appears in the navigation bar at the bottom of the Broadcast screen.

1. Press and hold the right arrow button to move to the playlist page (the playlist icon is selected).



Audio player screen

2. Quick-press the arrow buttons to scroll to the audio file you want.
3. Quick-press the red circle button to select it – it plays and is broadcast together with the microphone.

> **Note:** inserting a microSD card with tour files is not enough – the playlist icon appears only on an RTX programmed in **Hive Central**, from the Dispatch page or the RTX page.

This applies to broadcasting only. In receiver (RX) mode, tours work differently – see *Audio guide mode* below.

> **License:** both pre-loaded audio broadcasting and audio guide mode require a **DUPLEX+** license.

Audio guide mode (self-guided tours) RX MODE DUPLEX+

The RTX becomes a personal audio guide for **self-guided tours** – no live guide needed. Visitors move freely between exhibits in a gallery, museum or visitor center and enjoy each exhibit's content in their own language – on-demand audio stored on the RTX and live Auracast™ streams, all from one tour list. Audio guide packages are created in **Hive Central** and written to microSD cards (not included).

> **Example – a museum visit** A visitor collects an RTX at the entrance and listens in French throughout: a recorded introduction picked from the list, a sculpture's story by tapping its NFC tag, a live guided talk over Auracast™, and a film soundtrack in sync with the screen – all on one device, with no app or pairing.

Three ways to play an exhibit

Behind the scenes, a single tour loaded to the RTX can mix all three content types – live Auracast™ streams, on-demand audio files and timecode-based playback. This is transparent for the visitor: every item appears in the same tour list and plays the same way.

BEHIND THE SCENES · AUDIO CONTENT TYPES

Live Auracast™ stream
A live exhibit feeds audio straight into an Auracast™ transmitter, broadcast in real time.

On-demand playback
Audio files loaded into the tour list, played on demand when the visitor selects them. Not synchronized.

Timecode-based playback
Audio files on the RTX synced to a timecode stream – frame-accurate to video, lighting or a live show.

ON THE RTX · HOW THE VISITOR PLAYS EACH ITEM

Manually select
Scroll the track list and pick an item.

Proximity trigger FUTURE
Audio starts as visitors approach (beacon).

Tap-to-play (NFC)
Tap an exhibit tag to start its audio.

Packages are created in **Hive Central** – see the Hive Central User Guide: bettear.com/hive-central-guide

Timecode over Auracast™ RX MODE DUPLEX+

One CASTER keeps up to 50 exhibits in sync. The CASTER broadcasts only the clocks – the audio files live on each RTX – so every visitor hears each exhibit in their own language, frame-accurate to video, lighting or a live show.



Audio files live on each RTX – the CASTER broadcasts only the clocks.
Frame-accurate, every language – up to 50 exhibits per CASTER.

> **Note:** timecode-based playback needs a **DUPLEX+** license. The CASTER receives timecode from the media players and control systems on its network and broadcasts it over Auracast™.

12

Reset & firmware

Hardware reset

Press the **Reset** button on the back with a pin to force a restart.

Factory settings reset

With the device on, press and hold **Volume Up** and **Volume Down** together for 5 seconds, then wait for the restart.

Firmware upgrade

The RTX firmware can be upgraded in one of two ways:

A **RTX Upgrade Tool**
Up to 10 devices at a time from a computer – see steps below

B **SmartHive cradles + Hive Central**
Recommended for mass and large deployments – see the Hive Central User Guide: bettear.com/hive-central-guide

With the RTX Upgrade Tool

1. Download the **RTX Upgrade Tool** (Windows and macOS) from www.bettear.com and launch it.

2. With the tool already running, **connect** the RTX to the computer with a USB cable, and **power it off**.
3. **Quick-press** the red circle button (do not press and hold) and wait for the tool to detect the device. Up to 10 devices can be upgraded together – repeat steps 2–3 for each.
4. Click **Start Upgrade** and wait for the process to complete.



13

Charging

USB-C

5 VDC, 500 mA. A USB-C to USB-A cable is included; the power adapter is not. A full charge takes under 4 hours.

SmartHive cradle

10-bay cradle with 4 pogo-pin contacts and a magnetic latch per bay, for charging and programming. Smart charging maximizes battery lifespan.

Hive 4

Compact 4-bay RTX charger.

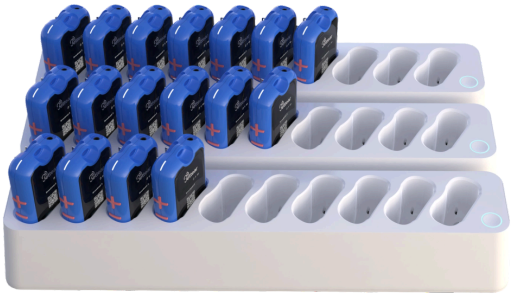

RTX devices docked in SmartHive cradles



RTX devices charging in Hive 4

14

Specifications

Audio

Connection	3.5 mm TRRS jack – headset, headphones, neck loop or microphone; TRS and TRRS headphones supported
Jack wiring	CTIA / AHJ – tip Left, ring 1 Right, ring 2 Ground, sleeve Mic
Latency	< 40 ms
Frequency response	10 Hz – 22 kHz
Sample rate	48 kHz
Max input voltage	0.707 Vrms
SNR / THD+N	ADC 91 / −85 dB; DAC 95 / −82 dB
Headphone output	16–32 ohm recommended; 16–64 ohm compatible
Playback codec	LC3
Processing / DSP	Ducking – playback is attenuated automatically under a live Auracast™ stream

Power & battery

Battery	Lithium-polymer, 3.7 VDC, 1,400 mAh – user-replaceable under a removable cover
Battery life	Receiver mode up to 16 h; transmitter mode up to 10 h, depending on TX power
Charge time	Under 4 hours
Charging	USB-C – 5 VDC, 500 mA; or the SmartHive cradle
Cradle contacts	4 pogo pins with a magnetic latch – charging and programming

Radio

Technology	Bluetooth® 5.3 Low Energy (Auracast™)
Frequency range	2400 – 2482 MHz (2.4 GHz ISM band)
Codec	LC3 – receiver (RX): 16 / 24 / 48 kHz, adaptive; transmitter (TX): 24 kHz only
TX power	Selectable 5 / 10 / 15 / 20 dBm from the device menu or SmartHive
Modes	Transmitter or receiver, switched in Hive Central (DUPLEX, DUPLEX+)
Secure broadcast	4–16-character password, AES128 – joined through B-PASS or SmartHive, not from the stream list
NFC	Tap-to-Access on supported devices

Display & indicators

Display	2" TFT RGB, 240 × 320
Status LED	RGB indicator

Physical

Dimensions	108 × 58 × 25 mm
Weight	120 g (0.26 lbs); shipping 210 g (0.46 lbs)
Colors	Light grey, dark grey, blue
Operating temp.	−10 °C to +43 °C (14 °F to 109.4 °F)
Storage temp.	−30 °C to +70 °C (−22 °F to 158 °F)

Regulatory

EU / UK	CE (RED) – EN 300 328, EN 301 489-1 / -17, EN 62368-1, EMF; UKCA
USA / Canada	FCC ID 2BOBX-BRTX (Part 15.247); IC 33650-BRTX (RSS-247)
Japan	MIC 219-259225
Australia / NZ	RCM – AS/NZS 4268, CISPR 32, 2772.2
Environmental	RoHS, REACH, WEEE (Cat. VI)
Battery transport	UN 38.3; MSDS

Dimensions

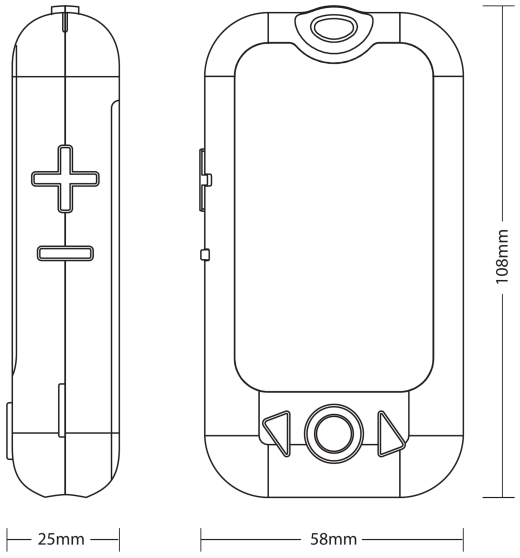

What's in the box

SUPPLIED

RTX unit and a USB-C to USB-A charging cable

REQUIRED – NOT INCLUDED

USB power adapter, 5 VDC / 500 mA

microSD card – needed only for tours, audio guides and audio file broadcasting

Accessories & compatible devices

ITEM	WHAT IT DOES	TYPE
Belt clip	Clips the RTX to a belt	Add-on
B-PASS	Access to secure streams with Tap-to-Access	Compatible device
SmartHive + Hive Central	Charges and programs up to 10 RTX devices; several SmartHive units can be linked	Compatible device / software
Hive 4	Compact 4-bay RTX charger	Compatible device
CASTER series	Auracast™ transmitters the RTX receives from	Compatible device

Accessories and compatible devices are sold separately.

15

Troubleshooting

PROBLEM	WHAT TO DO
No streams appear in the list	Check that the transmitter is on and within range. The RTX scans only while no stream is playing – stop the playing stream to search again.
A stream is shown with a lock and cannot be joined	It is a secure stream. Join it by tapping a B-PASS panel, or set it up with the RTX quick setup tool or Hive Central.
Only some streams are shown, or the RTX always joins the same stream	The RTX is set to Stream Lock or List Lock. Change it with the RTX quick setup tool or Hive Central, or perform a factory settings reset – see chapter 12.
Connection failed (✕) or the audio drops	The signal is weak – move closer to the transmitter. The connection indicator in the status bar shows the reception quality.
No sound	Raise the volume, make sure the headset or headphones are fully plugged in and use a CTIA (AHJ) wired plug.
Tapping the B-PASS does nothing	Check that your RTX model supports NFC (some models do not), that it is on and in receiver mode, then hold the lower half of its back flat against the NFC icon on the B-PASS frame for a moment.
The RTX cannot switch to transmitter mode	Transmitter mode needs a DUPLEX or DUPLEX+ license – see chapter 10.
The playlist icon does not appear	The RTX must be programmed for a tour in Hive Central, with the tour's microSD card inserted. Copying files to the card is not enough.
A stream has no language flag	The broadcast does not include language information, or its language is not on the supported list – see chapter 04.
The computer does not show Bettear USB Mic	Use a USB data cable, check the RTX is in receiver mode, reconnect it and select Bettear USB Mic as the input device.
The RTX Upgrade Tool does not detect the RTX	Connect the RTX by USB while it is off, then quick-press (do not hold) the red circle button.
The RTX does not charge	Use a 5 VDC / 500 mA USB power adapter and the supplied cable, or check the RTX is seated correctly in the SmartHive and that nothing blocks the SmartHive pogo-pin contacts.
The RTX does not respond	Press the Reset button on the back with a pin. If the problem persists, perform a factory settings reset – see chapter 12.

Still need help? Contact Bettear support at support@bettear.com or your local Bettear distributor.

16

Safety & support

Regulatory notices

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: reorient or relocate the receiving antenna; increase the separation between the equipment and receiver; connect the equipment into an outlet on a circuit different from that to which the receiver is connected; consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.
- Always observe standard safety precautions during installation, operation and maintenance of this product. Only qualified and authorized service personnel should carry out adjustment, maintenance or repairs to this product. No installation, adjustment, maintenance or repairs should be performed by either the operator or the user.
  Respectez toujours les standards de sécurité durant l'installation, l'opération et la maintenance de ce produit. Seul le personnel de service qualifié et autorisé devrait effectuer l'ajustage, la maintenance ou les réparations de ce produit. Aucune opération d'installation, d'ajustage, de maintenance ou de réparation ne devrait être effectuée par un opérateur ou l'utilisateur.
- This device contains license-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's license-exempt RSS(s). Operation is subject to the following two conditions: (1) this device may not cause interference; (2) this device must accept any interference, including interference that may cause undesired operation of the device.
  Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Hearing safety

This product can amplify audio to a high volume that could damage hearing if used improperly. Turn the volume down before use, then raise it only as far as needed to hear clearly. Do not let children or unauthorized individuals use the product without supervision. Automatic gain control (AGC) helps prevent intense noise bursts.

Medical device safety

Before using the RTX with an implantable or other medical device, consult your physician or the device manufacturer, and follow the safety guidelines they provide.

Warranty & privacy

Visit www.bettear.com for warranty, service and privacy policy information.

Warning: electrical shock hazard. No user-serviceable parts inside. To reduce the risk of electrical shock, do not remove or open the cover. Contact Bettear for assistance.

Support

Email	support@bettear.com	**Website**	www.bettear.com
Phone	+972-3-777-8630	**Address**	33 Ha'Barzel, Tel Aviv, Israel

For further assistance, contact Bettear support at support@bettear.com, or your local Bettear distributor.

17

Related documentation & tools

Functions that use other Bettear products or software are described in their own manuals and guides, available on bettear.com.

Hive Central User Guide Online guide, on the Hive Central page of bettear.com	bettear.com/hive-central-guide
Hive Central software Download from the Hive Central page	bettear.com/products/hive-central
RTX quick setup tool Online tool on bettear.com for setting up a single RTX	bettear.com/rtx-setup
RTX Quick Setup Guide Download from the RTX page on bettear.com	bettear.com/products/rtx
CASTER user manuals On the CASTER product page	bettear.com/products/caster
B-PASS user manual On the B-PASS product page	bettear.com/products/b-pass
SmartHive user manual On the SmartHive product page	bettear.com/products/smarthive